
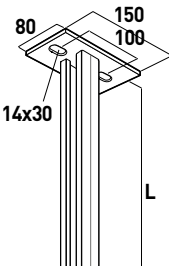
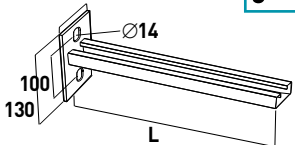
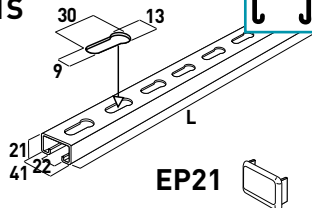


P21D – C21S – R21S ⚙️ CF30 – CF54 – CF80 – CF105 ⚙️ 100 → 450 mm



P21D  (mm)	 P21D 300 P21D 500 P21D 600 P21D 800 P21D 1000 P21D 1200 P21D 1500 P21D 2000 P21D 3000	$\frac{L}{\text{mm}}$ 300 500 600 800 1000 1200 1500 2000 3000	 daN.m 85 85 85 85 85 85 85 85 85	GS – – – – – – – – –	GC CM 598 203 CM 598 213 CM 598 223 CM 598 233 CM 598 243 CM 598 253 CM 598 263 CM 598 273 CM 598 283	304L – – – – – – – – –	316L – – – – – – – – –
C21S  (mm)	 C21S 150 C21S 200 C21S 300 C21S 400	$\frac{L}{\text{mm}}$ 150 200 300 400	 daN 250 180 130 100	– – – –	CM 597 013 CM 597 023 CM 597 033 CM 597 043	– – – –	– – – –
R21S  (mm)	 R21S 3000 EP21	$\frac{L}{\text{mm}}$ 3000 –	– –	CM 597 320 CM 559 675	CM 597 323 –	CM 597 328 –	CM 597 324 –
SU41  (mm)	SU41	–	 daN.m 35	GS CM 595 340	–	–	–